## **CLAXNPBPWR**

## **Installation Instructions**



## 24VAC/DC power supply for HAWK

## **CLAXNBPPWR**

The CLAXNBPPWR module can be used to power the HAWK 2xx/6xx (and if installed, also any CLAXHAWKIO16 modules) from a **dedicated** Class 2, 24Vac transformer, or from a 24Vdc power supply. If installing CLAXHAWKIO16 modules, the CLAXNBPPWR must be installed as the *last* (end) module in the chain.

NOTE If powering from a 24V transformer, do *not* power any other equipment with it. Otherwise, conducted noise problems may result. Also, do not ground either side of the transformer's 24V secondary.

Located at the bottom of the CLAXNBPPWR module is a 2-position power connector, and an earth ground spade lug.


Connect the supplied earth ground wire to a nearby earth ground point. Unplug the power connector plug from the module and make connections to it as shown in the figure below.

Caution Do not pl

Do not plug 24 V power into the CLAXNPBPWR (reinsert connector plug) until all other mounting and wiring is completed.

Power consumption depends on installed accessories and option boards, and may vary from:

- HAWK 2xx/6xx with the CLAXNPBPWR module alone: approx. 8.5 VA (AC) or 8.5 W (DC)
- HAWK 2xx/6xx with CLAXNPBPWR and four (4) CLAXHAWKIO16 modules, plus option boards: up to 20 VA (AC) or 20 W (DC)

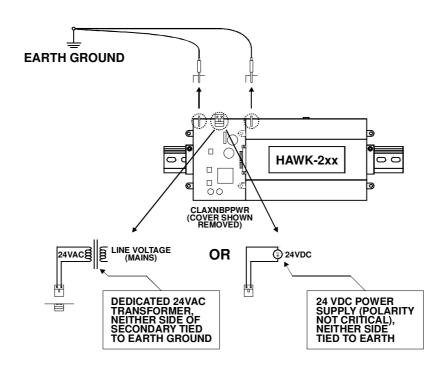

Copyright © 2008 Honeywell GmbH! All Rights Reserved

EN1Z-0951GE51 R0608

Manufactured for and on behalf of the Environmental and Combustion Controls Division of Honeywell Technologies Sarl, Ecublens, Route du Bois 37, Switzerland by its Authorized Representative.

CentraLine
Honeywell GmbH
Böblinger Straße 17
D-71101 Schönaich
Tel +49 7031 637 845
Fax +49 7031 637 846
info@centraline.com
www.centraline.com

CentraLine
Honeywell Control Systems Ltd.
Arlington Business Park
UK-Bracknell, Berkshire RG12 1EB
Tel +44 13 44 656 565
Fax +44 13 44 656 563
info-uk@centraline.com
www.centraline.com

Printed in Germany.
Subject to change without notice.
EN1Z-0951GE51 R0608

