

SF Asennusohje
 S Installation instruktioer
 N Installationsinstruktioner
 DK Installationsinstrukt
 NL Installatievoorschrift
 D Montageanweisung
 F Instructions d'installation
 ES Instrucciones de montaje
 I Istruzioni di montaggio

ML7425A6008/B6007 Electric Linear Valve Actuators

INSTALLATION INSTRUCTIONS

ML7425A6008
ML7425B6007

A1-A7: Installation

mounting
 D Einbau
 F montage
 I montaggio
 NL montage
 DK montere
 N monter
 FIN asentaminen
 S montera
 E montaje

A1

~108 mm

A2

a, b, c, a1, a2, a3, 10 mm

A3

24 Vac, a, b, 4...5 mm

A4

POSITION	Wiring
Y	0(2)...10 V
↓	24 V L, 24 V ~
1 ↓	24 V L, 24 V ~
2 ↑	24 V L, 24 V ~
B	24 V L, 24 V ~

A5a

W3, W1, Y = 0(2) ... 10 V, 0%, 50%, 100%

<p>A5b</p>	<p>A5c</p>	<p>A6</p>
<p>A7</p>	<p>B1: Manual</p>	<p>B2</p>
<p>C1-C2: Dismounting</p> <p>dismounting D Ausbau F démontage I smontaggio NL demontage DK afmontere N demontere FIN purkaminen S nedmontera E desmontaje</p>	<p>C1</p>	<p>C2</p>